

StructureExpert Weld-6

With SewSoft

Installation Manual

Original Instructions



Doc. no.: CLWE17177027-01_B_en
Date of release: 2025.08.21

Copyright

The contents of this manual are the property of Struers ApS. Reproduction of any part of this manual without the written permission of Struers ApS is not allowed.

All rights reserved. © Struers ApS.

Table of Contents

1 About StructureExpert Weld-6	4
2 Installation of the hardware	4
3 Installation of SewSoft	6
4 Installation of the USB license dongle	8
5 Troubleshooting for SewSoft	10
6 Manufacturer	10

1 About StructureExpert Weld-6

StructureExpert Weld is an imaging tool designed for weld bead analysis.

Features:

- inverted optical system
- built-in digital camera
- automatic lighting
- focus
- calibrated optical zoom steps
- software-controlled magnification adjustment
- internal light system with 4 ramps of LED that can be controlled simultaneously or individually
- Field of view from ~ 82 to 1.8 mm (~ 3.2" to ~ 0.07")
- Equivalent to ~ 2.5x - ~ 120x optical magnification

Included:

- StructureExpert USB key with SewSoft 4.00
- USB license dongle

Options (modules not included):

- DataView
- Report Generator
- QDas
- XML/JSON
- SewSoft AI 4.0
- Data Sharing and Visualization

2 Installation of the hardware

Requirements

Carry out the installation in the order described in this procedure.

Procedure


1. Plug in the power supply cable.

2. Plug in the two USB 2.0 cables in the computer.

- One is marked **Light**.
- One is marked **Camera**.

When you have connected the USB cables, Microsoft Windows automatically installs the camera drivers and the light drivers.

3. After the automatic installation, launch the Microsoft Windows Device Manager.
4. In the **Cameras** section, make sure that you can see the entry for the device **SEW6_HD_camera**.

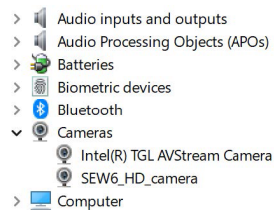

5. In the **Ports (COM & LPT)** section, make sure that you can see two entries, one for the camera and one for the light.



The port values must be in the range of 1 to 10.


If the com port values are incorrect, you can change the values manually within the range of 1 to 10. Manually change the port com value.

Manually change the port com value


1. If the com port values are incorrect, right-click on the port you wish to change, and select **Properties**.



2. Select the tab **Ports (COM & LPT)**, and click on **Advanced...**.

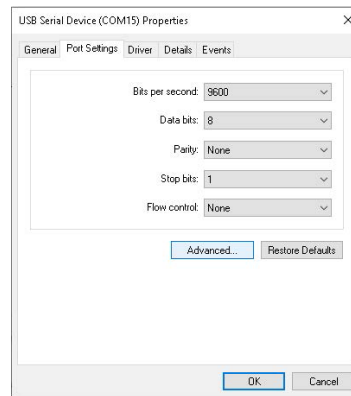

3. Select a value lower than 10, even if the selected port value is shown as **in use**.

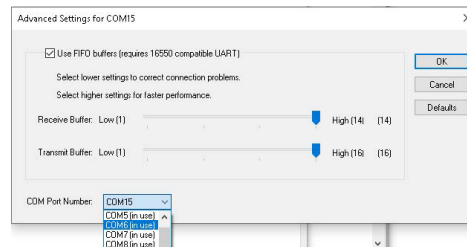


4. Click **OK**.
5. Repeat the procedure for the other port if the value is higher than 10.
6. Switch the device off and on.
7. Make sure that the port com values are correctly set.


3 Installation of SewSoft

1. Plug in the power cable.
2. Connect the USB license dongle with SewSoft to the computer.
3. Open the Microsoft Windows File Explorer, and launch **setup.exe** located at the root of the USB key.

4. The installation setup window opens. Click on StructureExpert Weld **Installation setup** to install the SewSoft software.

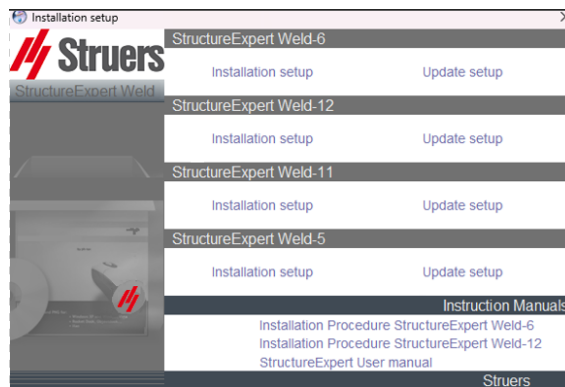

5. Click **Next**.

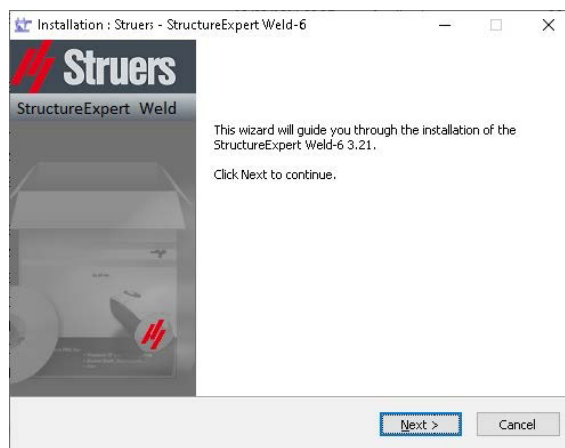

6. In the **License Agreement** window, click **I Agree**.
7. Click **Install**.
8. Choose the language you prefer to use and the folder where you wish to save the file, then click **Save settings**.
9. In the **Saving folder** field, select the saving folder path you wish to use.
10. When the software installation is complete, select **Close**.
11. The **Com ports definition** window is shown.

 
12. Click **Save settings**.



13. Make sure that the com port values are within the range of 1 to 10.


If the com port values are incorrect, you can change them manually. See [Installation of the hardware ►4](#).

14. In the event of a change of com port number, it is possible to open **SEW6_settings.exe** to redetect the correct port com for both camera and light.




4 Installation of the USB license dongle


1. Connect the USB license dongle to a USB port of the computer.
2. Open the **Device Manager**, then right-click on **USB-Chip**.

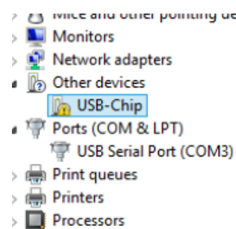


3. Select **Update Driver Software**.

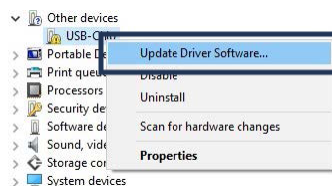


4. Select **Browse my computer for driver software**.

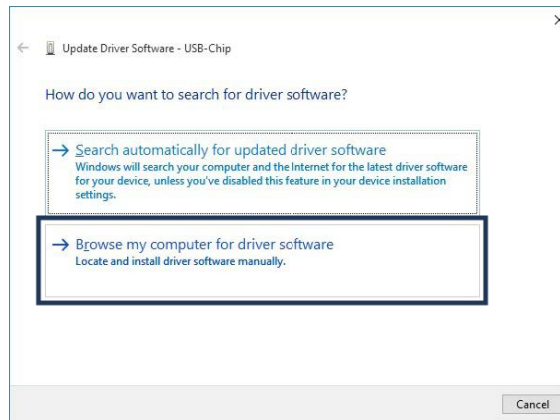


5. Click **Browse**.

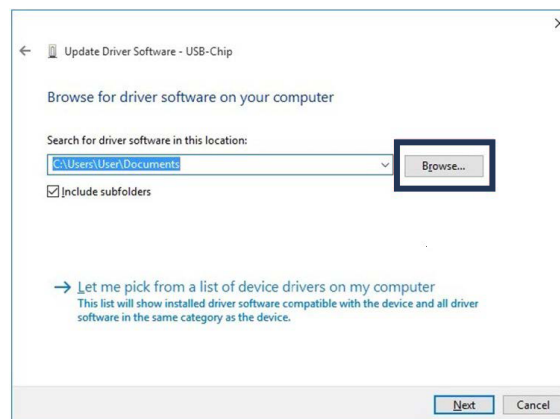

6. Click **Close**.

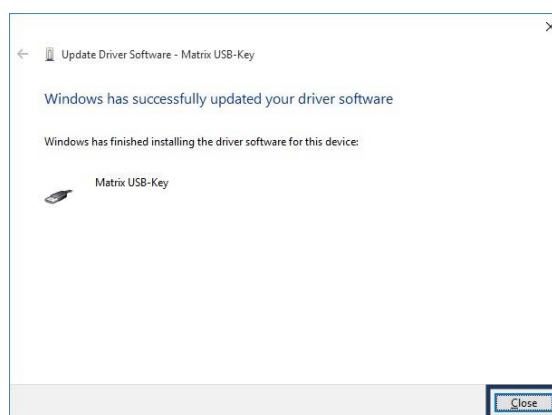

The dongle is now shown in the **Device Manager**.

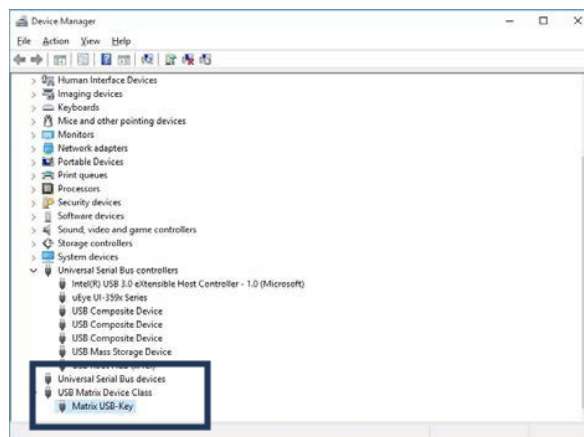

5 Troubleshooting for SewSoft

Error	Action
Issues with the software interface after installation, such as missing panels, white panels, etc.	1. Open the folder Tools Version 3.30, located in the provided pen drive. 2. Install one of the following files: • If you are running a 64-bits computer, install MicrosoftEdgeWebView2RuntimeInstallerX64.exe • If you are running a 32-bits computer, install MicrosoftEdgeWebView2RuntimeInstallerX86.exe 3. After installation, SewSoft should work correctly.

6 Manufacturer

Struers ApS
Pederstrupvej 84
DK-2750 Ballerup, Denmark
Telephone: +45 44 600 800
Fax: +45 44 600 801
www.struers.com

Responsibility of the manufacturer

The following restrictions should be observed, as violation of the restrictions may cause cancellation of Struers legal obligations.

The manufacturer assumes no responsibility for errors in the text and/or illustrations in this manual. The information in this manual is subject to change without notice. The manual may mention accessories or parts not included in the supplied version of the equipment.

The manufacturer is to be considered responsible for effects on safety, reliability, and performance of the equipment only if the equipment is used, serviced, and maintained in accordance with the instructions for use.

en For translations see
bg За преводи вижте
cs Překlady viz
da Se oversættelser på
de Übersetzungen finden Sie unter
el Για μεταφράσεις, ανατρέξτε στη διεύθυνση
es Para ver las traducciones consulte
et Tõlked leiate aadressilt
fi Katso käännökset osoitteesta
fr Pour les traductions, voir
hr Za prijevode idite na
hu A fordítások itt érhetők el
it Per le traduzioni consultare
ja 翻訳については、
lt Vertimai patalpinti
lv Tulkojumus skatīt
nl Voor vertalingen zie
no For oversættelser se
pl Aby znaleźć tłumaczenia, sprawdź
pt Consulte as traduções disponíveis em
ro Pentru traduceri, consultați
se För översättningar besök
sk Preklady sú dostupné na stránke
sl Za prevode si oglejte
tr Çeviriler için bkz
zh 翻译见

www.struers.com/Library